


SAMPLE SETTINGS

MODE

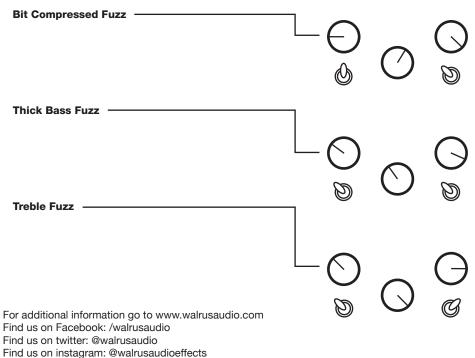

FUZZ

BASS

Power - Internal 9-volt battery or external DC 9 volt power supply is activated by plugging a cable into the input. The input cable should be removed when the unit is not in use to avoid running down the battery.

Level - Controls the output level.

Fuzz - Adjusts the fuzz or distortion output. As it is increased the signal becomes more distorted and fuzzy.

Tone - Allows adjustment and addition of treble frequencies.

Bass Toggle - When activated, boosts the low end/bass. To activate switch the toggle to the left. **Mode Toggle** - Switches between arrangements of clipping diodes to create an assortment of fuzz tones.

Input Jack - Instrument cable to guitar.

Output Jack - Instrument cable to amp.

On/Off True Bypass Switch - Press switch to turn on (effect mode) and turn off (bypass). When the Jupiter is in effect mode, the purple LED will turn on. In bypass, the purple LED will be off.