

Drum Kit

400



The **DD400** has a super compact frame, making it ideal for bedrooms, small studios or practice spaces. A headphone output and a quiet kick drum pedal means you can practice without disturbing the neighbours. USB and MIDI connections mean you can connect this kit to a computer for recording, composition or use as a MIDI controller.

420



The **DD420** can accommodate any size player with its fully adjustable frame. The choke function on the crash cymbal gives players greater control over their cymbal sound and the ability to use more authentic drumming techniques. A quiet 'stealth' style bass drum set up gives you a more realistic playing experience while keeping the noise levels at an absolute minimum. USB and MIDI connections mean you can connect this kit to a computer for recording, composition or use as a MIDI controller.

420X



Take your drumming to the next level with all mesh pads. With a bounce that cannot be matched with rubber pads, the **DD420X** brings you closer to an acoustic kit. The DD420X offers 3 mesh toms and a mesh snare drum plus a crash, ride and hi-hat cymbals. USB and MIDI connections can connect this kit to a computer for recording, composition or use as a MIDI controller.

450+



The **DD450+** drum module is a big step up - it comes with a teaching function, a metronome and reverb, as well as a whole host of realistic voices and kits. It's equally suitable for beginners and advanced drummers. The MIDI connectivity means you can record your playing on a sequencer or trigger software on your PC or Mac.

470X



The **DD470X** is a mesh head kit, that offers a realistic playing experience. Ideal for beginners, this drum module features 10 great sounding preset kits, 203 separate drums sounds, as well as a coaching mode for honing rhythm and timing skills. The mesh drum heads utilise a unique non contact technology with adjustable sensitivity for a truly authentic practicing experience, that builds skills that can be transferred to an acoustic kit with ease

480X



The **DD480X** combines mesh drum heads and wooden shells to provide a great sounding kit suitable for beginners and professionals alike. With a completely versatile drum module, you are able to fully customise 30 kits, as well as mix each pad's volume individually. Also with a metronome and coaching mode, this drum kit not only provides an authentic playing experience but can be used to improve your skills as a drummer no matter your level.

Pads	400	420	420X	450+	470X	480X
Snare	1x Snare Pad (single trigger)	1x Snare Pad (single trigger)	1x Snare Mesh Pad (single trigger)	1x Mesh Snare Pad (dual trigger)	1x 8" Mesh Snare Pad (dual trigger)	1x 10" Mesh Snare Pad (dual trigger)
Toms	3x Tom Pads (single trigger)	3x Tom Pads (single trigger)	3x Tom Mesh Pads (single trigger)	3x Tom Pads (single trigger)	3x 8" Mesh Tom Pads (dual trigger)	1x 10" 2x 8" Mesh Tom Pads (dual trigger)
Hi Hat	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (dual trigger)	1x Hi Hat Pad (dual trigger)
Crash	1x Crash Pad (single trigger)	1x Crash Pad (single trigger) with Choke	1x Crash Pad (single trigger) with choke	1x Crash Pad (single trigger) with Choke	1x Crash Pad (dual trigger) with Choke	1x Crash Pad (dual trigger) with Choke
Ride	1x Ride Pad (single trigger)	1x Ride Pad (single trigger)	1x Ride Pad (single trigger)	1x Ride Pad (dual trigger) with Choke	1x Ride Pad (dual trigger) with Choke	1x Ride Pad (dual trigger) with Choke
Bass Drum Pedal	Quiet Bass Drum Control Pedal	Stealth Bass Drum Pedal & Pad	Bass Drum Full Kick Pad (single trigger)	Bass Drum Pedal & Pad	Pedal + 1x 8" Mesh Bass Pad	Pedal + 1x 8" Mesh Bass Pad
Hi Hat Pedal	Hi Hat Control Pedal	Hi Hat Control Pedal	Hi Hat Control Pedal	Hi Hat Control Pedal	Hi Hat Control Pedal with Half Open Feature	Hi Hat Control Pedal with Half Open Feature
Module	400	420	420X	450+	470X	480X
Voices	108	108	108	310	203	470
Preset Kits	10	10	10	24	10	30
Editable User Kits	-	-	-	11	10	30
Song Patterns	40	40	40	60	38	38
Effects	-	-	-	Reverb	-	-
Equaliser	-	-	-	-	-	-
Metronome	Yes	Yes	Yes	Yes	Yes	Yes
Display	3 Digit LED	3 Digit LED	3 Digit LED	3 Digit LED	Backlight LCD	Backlight LCD
Polyphony	64	64	64	64	64	64
Record Function	-	-	-	-	Yes	Yes
Controls	Power Switch, Master Volume Knob, Start/Stop, Click/Demo, Mode/Tempo Increase, Page/Tempo Decrease, +/- Buttons	Power Switch, Master Volume Knob, Start/Stop, Click/Demo, Mode/Tempo Increase, Page/Tempo Decrease, +/- Buttons	Power Switch, Master Volume Knob, Start/Stop, Click/Demo, Mode/Tempo Increase, Page/Tempo Decrease, +/- Buttons	Power switch, Start/Stop, Save Kit, Voice/Volume, Song/Volume, Drum off, Click, Hihat, Crash ride, Hi-hat control, Snare, Tom 1, Tom 2, Tom 3, Kick, Volume, Tempo	Power switch, Cursor Buttons, Voice, Rotary Dial, Volume Knob, Song, Play/Pause, Tempo, Metronome, Coach, Mute, REC, Home, Return, Function Buttons, Setup	Power, Cursors, Voice, Rotary, Home, Song, Play/Pause, Setup, Metronome, Coach, Mute, REC, Volume Slider x6, Function Buttons, Master Vol., Phone Vol., Aux In Vol.
Connections	Headphones, Aux In, Stereo Out, USB, MIDI Out, 9V DC Power	Headphones, Aux In, Stereo Out, USB, MIDI Out, 9V DC Power	Headphones, Aux In, Stereo Out, USB, MIDI Out, 9V DC Power	Headphones, Aux In, Stereo Out, Loom Connector, MIDI In/Out, Power, USB, Tom Expansion, Crash 2 Expansion, 9V DC Power	Headphones, Stereo Out, Aux In, MIDI In/Out, USB MIDI, DC In	Headphones, MIDI In/Out, Stereo Out, Aux In, DC In