

Check the Included Items

After opening the package, check that all of the included items are present. If anything is missing, contact your dealer.

- KD-10
- Owner's Manual
- Connection cable

* This package does not include a kick pedal or beater. A variety of commercially available beaters can be used, including felt, plastic, or wood types.

Main Features

The Strike Feel of an Acoustic Kick Drum in a Compact Size

A strike surface combining dedicated mesh material with cushion material provides the same strike feel as an acoustic drum, while allowing a compact design.

Twin Pedal Support

In spite of its compact size, the strike surface is large enough to accommodate twin pedal setups.

 
High Compatibility with Commercially-Available Kick Pedals

The pedal mounting plate has an adjustable angle to accommodate differences in the attachment mechanism and position of various kick pedals. You can use the commercially-available pedal of your choice.

Quiet Impact

A rubber cover with a proprietary structure is combined with a dedicated cushion, providing a high degree of sound absorption that is remarkable for a kick drum pad.

Descriptions

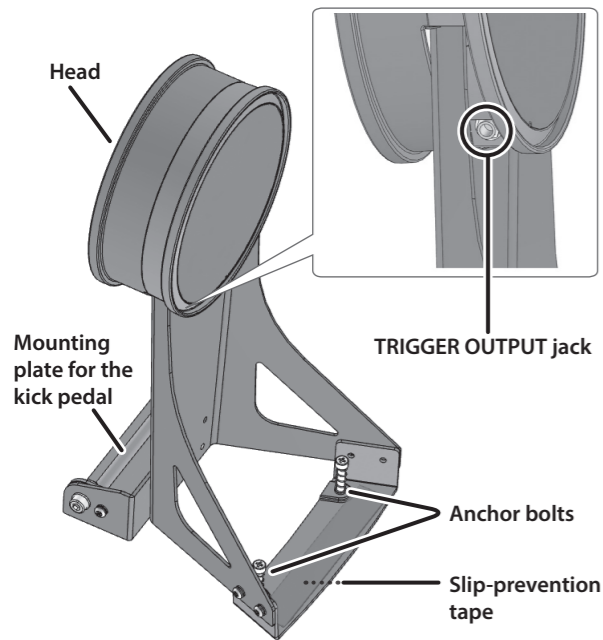

* Do not subject the strike surface to any force other than performance, and do not allow foreign objects to get inside it. Doing so will cause malfunction or damage.


Setup

Attaching the Kick Pedal

1. Attach the kick pedal.


Position the beater so that it strikes the center of the head, then secure the kick pedal and KD-10 firmly in place.

 * Take care not to pinch your fingers.

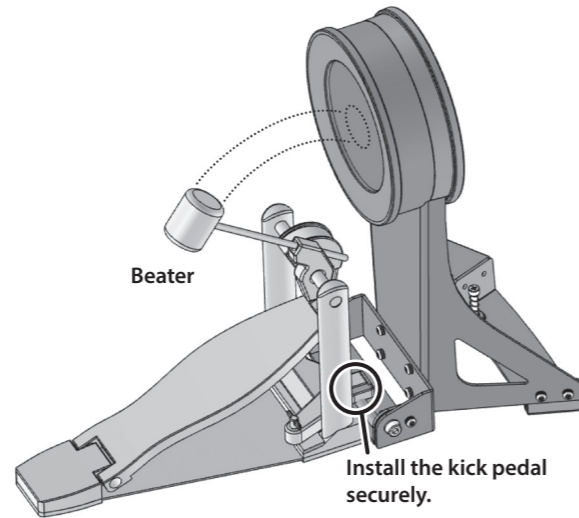

2. Step on the kick pedal and make sure that it's properly attached and in a stable position.

 Check to make sure that the base of the KD-10 and the kick pedal both make contact with the floor.

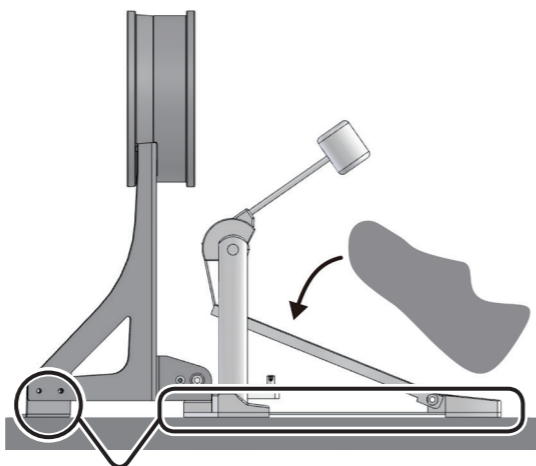

Check to be sure they're making contact with the floor

 
When Using a Twin Pedal

Position the two beaters equally apart from the center of the pad as shown in the figure.


If one of the beater is further away from the center than the other, the sound from the further beater will be lower in volume, or will not sound as desired.

Using a twin pedal will result in lower sensitivity as compared to when a single pedal is used. Raise the sensitivity on the sound module.

Correct positioning

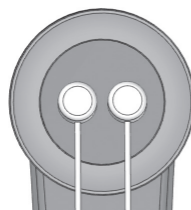


Incorrect positioning

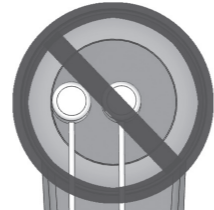 

Adjusting the Anchor Bolts

 If you're using this unit on a V-Drums mat, on a Noise Eater (NE-10), or on carpet, extending the anchor bolts will secure the unit in place, making it easier for you to perform.

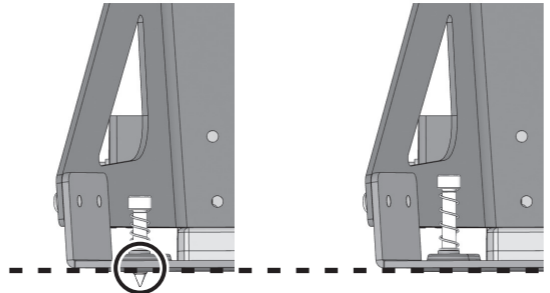

When using on the V-Drums mat, Noise Eater, or carpet

 
When using on the floor

- * When used on flooring, the anchor bolts may damage the floor.
- * The tips of the anchor bolts are sharp. Handle with care.

Connections

Connect this unit's TRIGGER OUTPUT jack to your sound module, using the connection cable of your sound module or the included connection cable.

- * Connect the L-shaped plug of the cable to the KD-10's TRIGGER OUTPUT jack.

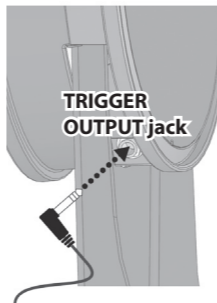

Sound module	Connection cable	Jack
TD-50/ TD-30	Connection cable included with this unit	KICK
TD-25/ TD-17/ TD-15/ TD-11/ TD-1	Connection cable of sound module (KIK)	-
HPD-20	Connection cable included with this unit	TRIG IN
SPD-30		1/KICK
SPD-SX	Connection cable included with this unit	TRIG IN 1/2, TRIG IN 3/4
TM-6 PRO		TRIGGER IN 1-6
TM-2		TRIG IN 1, TRIG IN 2

- * To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.
- * Make sure KD-10 does not touch the drum stand or other pads.

Sound Module Settings

Sound module	Value	
TD-50/ TD-30/ TD-25/ TD-15/ TD-11/ HPD-20/ SPD-30/ SPD-SX/ TM-2	"Trig Type," "Pad Type," "Type"	KD-9
TD-1	"Pad Type"	Kick Pedal: 2
TD-17	"Pad Type"	KD-10
TM-6 PRO	"Trig Type"	KD-10

* Use the Sensitivity setting (Sens) to adjust the sensitivity of the pad to your taste.

* If double triggering occurs, adjust the sensitivity by increasing the value of the sound module's trigger parameter "Threshold."

USING THE UNIT SAFELY

WARNING

Do not disassemble or modify by yourself

Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.

Do not repair or replace parts by yourself

Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."

Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness; or are
- Placed in a poorly ventilated location.

WARNING

Do not place in an unstable location

Otherwise, you risk injury as the result of the unit toppling over or dropping down.

Do not allow foreign objects or liquids to enter unit; never place containers with liquid on unit

Do not place containers containing liquid (e.g., flower vases) on this product. Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions.

Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.

Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.

CAUTION

Route all power cords and cables in such a way as to prevent them from getting entangled

Injury could result if someone were to trip on a cable and cause the unit to fall or topple.

Avoid climbing on top of the unit, or placing heavy objects on it

Otherwise, you risk injury as the result of the unit toppling over or dropping down.

Disconnect all cords/cables before moving the unit

Damage or malfunction may result if you fail to disconnect all cables before moving the unit.

Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.

- Removable Parts:
- Anchor Bolts
 - Springs

IMPORTANT NOTES

Placement

- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Do not paste stickers, decals, or the like to this instrument. Peeling such matter off the instrument may damage the exterior finish.
- Do not place containers or anything else containing liquid on top of this unit. Also, whenever any liquid has been spilled on the surface of this unit, be sure to promptly wipe it away using a soft, dry cloth.

Maintenance

- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- When you perform, the sound and vibration of the impact can travel unexpectedly well through a wall or floor. Take care that you are not inconveniencing other people nearby.

Trademarks

- Roland, V-Drums, and Noise Eater are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

Main Specifications

	Roland KD-10: Kick Pad	
Pad size	5 inches	
Dimensions	210 (W) x 209 (D) x 443 (H) mm 8-5/16 (W) x 8-1/4 (D) x 17-1/2 (H) inches	
Weight	3.3 kg	7 lbs 5 oz
Accessories	Owner's Manual, Connection cable	
Options (sold separately)	Noise Eater (NE-10)	

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.