

# AURO® BEAM 200 DC

BEAM MOVING HEAD

WITH OSRAM SIRIUS 132 W DISCHARGE LAMP



13 CH Mode						
Ch.	Function	Values				Sub-Group
1	Pan	000	-	255	0% to 100%	Pan
2	Pan fine	000	-	255	0% to 100%	
3	Tilt	000	-	255	0% to 100%	Tilt
4	Tilt fine	000	-	255	0% to 100%	
5	Dimmer	000	-	255	0% to 100%	Dimmer
6	Strobe	000	-	005	Strobe open	Multifunctional Strobe
		006	-	010	Strobe closed	
		011	-	033	Pulse Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 13Hz	
7	Colour Wheel	251	-	255	Strobe open	Colour Wheel
		000	-	005	Open	
		006	-	011	Open/Deep Red	
		012	-	017	Deep Red	
		018	-	023	Deep Red / Medium Blue	
		024	-	029	Medium Blue	
		030	-	035	Medium Blue / Yellow	
		036	-	041	Yellow	
		042	-	047	Yellow / Magenta	
		048	-	053	Magenta	
		054	-	059	Magenta / Deep Green	
		060	-	065	Deep Green	
		066	-	071	Deep Green / Lavender	
		072	-	077	Lavender	
		078	-	083	Lavender / Peacock	
		084	-	089	Peacock	
		090	-	095	Peacock / Orange	
		096	-	101	Orange	
		102	-	107	Orange / Lime	
		108	-	113	Lime	
		114	-	119	Lime / Pink	
		120	-	125	Pink	
		126	-	131	Pink / Amber	
		132	-	137	Amber	
		138	-	143	Amber / CTO	
		144	-	149	CTO	
		150	-	155	CTO / Deep Blue	
		156	-	161	Deep Blue	
		162	-	167	Deep Blue / Open	
		168	-	192	Open	
		193	-	223	Color Wheel rot. Slow -> Fast, CW	
		224	-	224	Color Wheel rot. Stop	
225	-	255	Color Wheel rot. Fast -> Slow, CCW			

8	GoboWheel	000	-	005	Open	Gobo
		006	-	011	Gobo 1	
		012	-	017	Gobo 2	
		018	-	023	Gobo 3	
		024	-	029	Gobo 4	
		030	-	035	Gobo 5	
		036	-	041	Gobo 6	
		042	-	047	Gobo 7	
		048	-	053	Gobo 8	
		054	-	059	Gobo 9	
		060	-	065	Gobo 10	
		066	-	071	Gobo 11	
		072	-	077	Gobo 12	
		078	-	083	Gobo 13	
		084	-	089	Gobo 14	
		090	-	095	Open	
		096	-	101	Gobo 1 shake (slow-fast)	
		102	-	107	Gobo 2 shake (slow-fast)	
		108	-	113	Gobo 3 shake (slow-fast)	
		114	-	119	Gobo 4 shake (slow-fast)	
		120	-	125	Gobo 5 shake (slow-fast)	
		126	-	131	Gobo 6 shake (slow-fast)	
		132	-	137	Gobo 7 shake (slow-fast)	
		138	-	143	Gobo 8 shake (slow-fast)	
		144	-	149	Gobo 9 shake (slow-fast)	
		150	-	155	Gobo 10 shake (slow-fast)	
		156	-	161	Gobo 11 shake (slow-fast)	
162	-	167	Gobo 12 shake (slow-fast)			
168	-	173	Gobo 13 shake (slow-fast)			
174	-	179	Gobo 14 shake (slow-fast)			
180	-	192	Open			
193	-	223	Gobo Wheel rot. Slow -> Fast, CW			
224	-	224	Gobo Wheel rot. Stop			
225	-	255	Gobo Wheel rot. Fast -> Slow, CCW			
9	Focus	000	-	255	0% to 100%	Focus
10	Prism Linear	000	-	005	Prism 1 off	Prism
		006	-	127	Prism Position 0 ... 540°	
		128	-	191	Prism Rotation, Slow -> Fast, CW	
		192	-	192	Prism Rotation Stop	
		193	-	255	Prism Rotation, Fast -> Slow, CCW	
11	Prism Circle	000	-	005	Prism 2 off	
		006	-	127	Prism Position 0 ... 540°	
		128	-	191	Prism Rotation, Slow -> Fast, CW	
		192	-	192	Prism Rotation Stop	
		193	-	255	Prism Rotation, Fast -> Slow, CCW	
12	Frost	000	-	255	0% to 100%	Frost

13	Device Settings	000	-	005	no function	Device Settings
		006	-	020	Blackout while Moving on (Hold 3s)	
		021	-	035	Blackout while Moving off (Hold 5s)	
		036	-	050	Lamp On (Hold 3s)	
		051	-	065	Lamp Off (Hold 5s)	
		066	-	080	Invert Pan on (Hold 3s)	
		081	-	095	Invert Pan off (Hold 5s)	
		096	-	110	Invert Tilt on (Hold 3s)	
		111	-	125	Invert Tilt off (Hold 5s)	
		126	-	140	Reset Pan / Tilt (Hold 3s)	
		141	-	155	Reset only Head (Hold 3s)	
		156	-	170	Reset All Functions (Hold 3s)	
		171	-	255	no function	

16 CH Mode						
Ch.	Function	Values				Sub-Group
1	Pan	000	-	255	0% to 100%	Pan
2	Pan fine	000	-	255	0% to 100%	
3	Tilt	000	-	255	0% to 100%	Tilt
4	Tilt fine	000	-	255	0% to 100%	
5	Dimmer	000	-	255	0% to 100%	Dimmer
6	Strobe	000	-	005	Strobe open	Multifunctional Strobe
		006	-	010	Strobe closed	
		011	-	033	Pulse Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effect, 5s. ....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 13Hz	
251	-	255	Strobe open			

7	Colour Wheel	000	-	005	Open	Colour Wheel
		006	-	011	Open/Deep Red	
		012	-	017	Deep Red	
		018	-	023	Deep Red / Medium Blue	
		024	-	029	Medium Blue	
		030	-	035	Medium Blue / Yellow	
		036	-	041	Yellow	
		042	-	047	Yellow / Magenta	
		048	-	053	Magenta	
		054	-	059	Magenta / Deep Green	
		060	-	065	Deep Green	
		066	-	071	Deep Green / Lavender	
		072	-	077	Lavender	
		078	-	083	Lavender / Peacock	
		084	-	089	Peacock	
		090	-	095	Peacock / Orange	
		096	-	101	Orange	
		102	-	107	Orange / Lime	
		108	-	113	Lime	
		114	-	119	Lime / Pink	
		120	-	125	Pink	
		126	-	131	Pink / Amber	
		132	-	137	Amber	
		138	-	143	Amber / CTO	
		144	-	149	CTO	
		150	-	155	CTO / Deep Blue	
		156	-	161	Deep Blue	
		162	-	167	Deep Blue / Open	
		168	-	192	Open	
		193	-	223	Color Wheel rot. Slow -> Fast, CW	
224	-	224	Color Wheel rot. Stop			
225	-	255	Color Wheel rot. Fast -> Slow, CCW			

8	GoboWheel	000	-	005	Open	Gobo
		006	-	011	Gobo 1	
		012	-	017	Gobo 2	
		018	-	023	Gobo 3	
		024	-	029	Gobo 4	
		030	-	035	Gobo 5	
		036	-	041	Gobo 6	
		042	-	047	Gobo 7	
		048	-	053	Gobo 8	
		054	-	059	Gobo 9	
		060	-	065	Gobo 10	
		066	-	071	Gobo 11	
		072	-	077	Gobo 12	
		078	-	083	Gobo 13	
		084	-	089	Gobo 14	
		090	-	095	Open	
		096	-	101	Gobo 1 shake (slow-fast)	
		102	-	107	Gobo 2 shake (slow-fast)	
		108	-	113	Gobo 3 shake (slow-fast)	
		114	-	119	Gobo 4 shake (slow-fast)	
		120	-	125	Gobo 5 shake (slow-fast)	
		126	-	131	Gobo 6 shake (slow-fast)	
		132	-	137	Gobo 7 shake (slow-fast)	
		138	-	143	Gobo 8 shake (slow-fast)	
		144	-	149	Gobo 9 shake (slow-fast)	
		150	-	155	Gobo 10 shake (slow-fast)	
		156	-	161	Gobo 11 shake (slow-fast)	
162	-	167	Gobo 12 shake (slow-fast)			
168	-	173	Gobo 13 shake (slow-fast)			
174	-	179	Gobo 14 shake (slow-fast)			
180	-	192	Open			
193	-	223	Gobo Wheel rot. Slow -> Fast, CW			
224	-	224	Gobo Wheel rot. Stop			
225	-	255	Gobo Wheel rot. Fast -> Slow, CCW			
9	Focus	000	-	255	0% to 100%	Focus
10	Prism Linear	000	-	005	Prism 1 off	Prism
		006	-	127	Prism Position 0 ... 540°	
		128	-	191	Prism Rotation, Slow -> Fast, CW	
		192	-	192	Prism Rotation Stop	
		193	-	255	Prism Rotation, Fast -> Slow, CCW	
11	Prism Circle	000	-	005	Prism 2 off	Prism
		006	-	127	Prism Position 0 ... 540°	
		128	-	191	Prism Rotation, Slow -> Fast, CW	
		192	-	192	Prism Rotation Stop	
		193	-	255	Prism Rotation, Fast -> Slow, CCW	
12	Frost	000	-	255	0% to 100%	Frost

13	Auto Program	000	-	005	off	Auto Program
		006	-	067	Show 1 (slow -> fast)	
		068	-	129	Show 2 (slow -> fast)	
		130	-	191	Show 3 (slow -> fast)	
		192	-	255	Show 4 (slow -> fast)	
14	Pan/Tilt Macro	000	-	005	off	Auto Movement
		006	-	040	PAN „small > big“	
		041	-	075	TILT „small > big“	
		076	-	110	PAN / TILT „small > big“	
		111	-	145	PAN / TILT (invers) „small > big“	
		146	-	180	Circle „small > big“	
		181	-	215	Circle (invers) „small > big“	
216	-	255	Random „small > big“			
15	Pan/Tilt Speed	000	-	255	Pan/Tilt Fast -> Slow	Pan/Tilt speed
16	Device Settings	000	-	005	no function	Device Settings
		006	-	020	Blackout while Moving on (Hold 3s)	
		021	-	035	Blackout while Moving off (Hold 5s)	
		036	-	050	Lamp On (Hold 3s)	
		051	-	065	Lamp Off (Hold 5s)	
		066	-	080	Invert Pan on (Hold 3s)	
		081	-	095	Invert Pan off (Hold 5s)	
		096	-	110	Invert Tilt on (Hold 3s)	
		111	-	125	Invert Tilt off (Hold 5s)	
		126	-	140	Reset Pan / Tilt (Hold 3s)	
		141	-	155	Reset only Head (Hold 3s)	
		156	-	170	Reset All Functions (Hold 3s)	
		171	-	255	no function	