

GKB-76 Size Chart

Alesis	FUSION 8HD	QS8.1	QS8.2	VI61						
Arturia	KeyLab 88									
Casio	AT5	WK-110	WK-200	WK-210	WK-225	WK-245	WK-500	WK-6500	WK-7500	WK-7500
Casio	YPG-225									
Clavia	NORD STAGE 76									
CME	UF7	UF70	VX 7							
Hammond	XB-1	XK-1	XK-2	XK-3C						
Ketron	AUDYA 76	SD5	SD8	Solton SD-1	SX3000	VEGA	VEGA EX4	XD-9		
Korg	KARMA	Krome 73	Kronos 73	Kronos X 73	M3-73	Pa2XPRO	Pa3X 76	Pa3XLe	Pa4X-76	SP-250
	SP-500	SV-1 73	SV-1-73	TRITON EXTREME 61	TRITON STUDIO 61					
Kurzweil	Artis SE	Forte 7	Forte SE 88-key Stage Piano	K2600	K2600S	PC1SE	PC3	PC3A7	PC3K7	PC3LE7
	SP2	SP-76								
Nord	Piano 2 HA88	Piano 4	Piano 88	Stage 2 EX 88	Stage 2 EX HP76	Stage 2 HA76	Stage 2 HA88	Stage 3 88	Stage 3 HP76	STAGE 73
	STAGE 76	STAGE 88								
Roland	BK-9	E60	EXR-7	FA-07	FANTOM G7	FANTOM X7	FP-5	FP-5C	G-1000	G-70
	JUNO STAGE	Jupiter 80	Jupiter-50	VA-76	VK-7	VK8	VR-700	VR760	XP80	
StudioLogic	Acuna88	Numa Organ	VMK-176+							
Yamaha	9000 Pro	DGX203	DGX230	Genos	Montage7	MOTIF ES7	MOTIF XF7	MOTIF XS7	NP-V80	PSR-E453
	PSR-EW300	PSR-EW400	PSR-EW410	Tyros2	Tyros3	Tyros4	Tyros5-61	YPG225	YPG-235	