


# COT-01A HEADSTOCK CLIP-ON CHROMATIC TUNER USER MANUAL

## PRECAUTIONS

- To avoid damage, do not apply excessive force to the switches or controls.
- For cleaning, wipe with a clean, dry cloth. Do not use flammable liquid cleaners such as benzene or thinner.

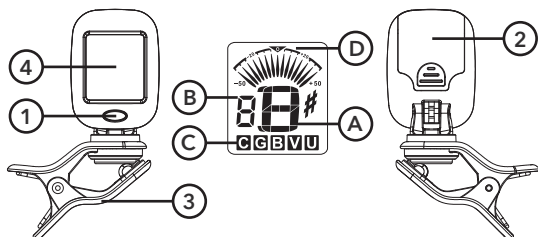

## CONTROLS AND FUNCTIONS

1. Power button (press and hold 2 seconds) & Tuning modes switch
2. Battery Compartment
3. Clip
4. Display:
  - A. Note name  
(for tuning modes of Chromatic/Guitar/ Bass/Violin/ Ukulele)
  - B. String number  
(for tuning modes of Guitar/Bass/ Violin/Ukulele)
  - C. Tuning mode
  - D. Meter

## SPECIFICATIONS

Tuning modes . . . . . Chromatic, Guitar, Bass, Violin, Ukulele  
Pitch range . . . . . 440Hz  
Detection range . . . . . AO ( 27.5Hz )-C8 (4186.00Hz)  
Tuning way . . . . . Clip ( tune by vibration)  
Detection accuracy . . . ± 0.5 cent  
Power supply . . . . . one 2032 coin battery  
Dimensions . . . . . 48mmX73mmX28mm  
Weight . . . . . 23g  
Included items . . . . . Owner's Manual, one 2032 coin battery

## TUNING PROCEDURE

1. Press the power button and hold 2 seconds to turn on (off) the tuner.
2. Press the power button continuously to select tuning mode out of Chromatic, Guitar, Bass, Violin and Ukulele.
3. Clip the tuner onto your instrument.
4. Play a single note on your instrument, the note name (and string number) will appear in the display. The screen colour will change. And the meter moves.
  - Backlight turns green; and meter stands in the middle: note in tune
  - Backlight stays white; and meter points to left or right: flat or sharp note

\* In Chromatic mode, the display shows the note name.  
\* In Guitar, Bass, Violin and Ukulele mode, the display shows the string number and the note name.

## POWER SAVING FUNCTION

If there is no signal inputs in 3 minutes after the power is on, the tuner will turn off automatically.

## INSTALLING THE BATTERY

Pressing on the cover as marked in the back of the product, open the case, insert a CR2032 coin battery being careful to observe the correct polarity. Battery life may differ according to the conditions of use. If the unit malfunctions, and turning the power OFF and then ON does not resolve the problem, please remove and wait for 5 minutes to reinstall the battery. Battery attached is only for testing. Please change to a new high standard battery when necessary.



MADE IN CHINA

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: +44 (0) 330 365 4444 or [info@gear4music.com](mailto:info@gear4music.com)

