MK5000

MK-5000 Portable Keyboard by Gear4music

USER MANUAL

WARNING! **EN**

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel
Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock
The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product
No naked flame sources, such as lighted candles, should be placed on the product
Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up. The ventilation must not be impeded by covering the appliance with items such as newspapers, table-cloths, curtains etc.
The mains plug is used to disconnect the appliance from the mains supply. Ensure that the mains outlet is easily-accessible and remove the plug from the mains outlet if you notice any abnormality with the appliance.
If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety:
• Make sure you observe the correct polarity when replacing batteries
• Avoid using new batteries together with used ones
• Avoid mixing different types of batteries
• Remove batteries if the appliance is to remain unused for an extended period of time
• Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc.
Used batteries must be disposed of in compliance with whatever regulations for their safe disposal that may be observed in the region in which you live.
Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

VAROVÁNÍ! **CZ**

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se odkažte na kvalifikované servisní oddělení.
Neumisťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prášení, mechanickými vibracemi nebo šokem.
Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt.
Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.
Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro předejití interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. noviny, kuchyňské utěrky, záclony apod.
Hlavní kabel umožňuje odpojit zařízení od elektřiny. Ujistěte se, že hlavní napájecí výstup je snadno dostupný a odpojte kabel pokud zaznamenáte jakoukoliv abnormalitu na zařízení.
Pokud je zařízení používáno nesprávně, baterie mohou explodovat nebo prosakovat a způsobit škodu nebo zranění. V zájmu bezpečnosti postupujte následovně:
• Uistite se, že baterie jsou v správné polaritě při jejich výměně
• Vyhýbejte se používání nových baterií se starými
• Vyhýbejte se používání různých typů baterií
• Baterie vyjměte ze zařízení, pokud není používáno po delší dobu
• Nikdy nedržte baterii v blízkosti železných objektů jako kuličkové pero, náhrdelník, sponky a pod.
Použité baterie musí být zlikvidovány v souladu s regulacemi toho daného území na kterém žijete.
Baterie nesmí být vystaveny nadměrnému teplu, jako například slunečnímu záření, ohni a podobně.

DVARSEL! **DK**

Dækslet må ikke åbnes. Ingen bruger-udskiftelige dele indeni. Overlad service til kvalificeret service personale
Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød
Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet
Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet
Vær sikker på at der er tilstrækkelig luftcirkulation og undgår at dække ventiler (hvis der er nogen) for at undgå at produktet bliver varmt. Ventillationen må ikke blokeres med overdækning af apparatet med genstande som aviser, dug, gardiner osv.
Stikket bruges til at afbryde apparatet fra strømmen. Sikre at stikkontakten er let tilgængelige, og fjern stikket fra stikkontakten, hvis du bemærker noget unormalt med apparatet.
Hvis denne bruges forkert så kan batterierne eksplodere eller lække og forårsage skader. Af hensyn til sikkerheden:
• Sørg for at overholde den korrekte polaritet, når du udskifter batterierne
• Undgå at bruge nye batterier sammen med brugte batterier
• Undgå at blande forskellige typer af batterier
• Fjern batterierne, hvis apparatet ikke bliver brugt i en længere periode
• Opbevar aldrig batterier sammen med metalgenstande såsom kuglepenne, halskæder, hårnåle osv.
Brugte batterier skal bortskaffes i overensstemmelse med reglerne for sikker bortskaffelse i det område hvor du bor.
Batterier må ikke udsættes for stærk varme som direkte sollys, ild eller lignende.

WAARSCHUWING! **NL**

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.
Plaats het produkt niet in de buurt van een hittebron zoals een radiator of in direkt zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.
Plaats het produkt niet in de buurt van spattende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas.
Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst.
Zorg om overhitting te voorkomen voor voldoende ventilatie en bellemmer ventilatieroosters niet. Bedek het produkt niet met dingen zoals kranten, tafellakens, gordijnen etc.
De stekker van dit apparaat wordt gebruikt om het apparaat aan en uit te zetten. Zorg ervoor dat het stopcontact gemakkelijk bereikbaar is en haal de stekker uit het stopcontact als u enige onregelmatigheid ondervindt.
Bij onjuist gebruik kunnen de battarijen exploderen of lekken en zo schade of verwondingen aanbrengen. in het belang van de
• Zorg dat u de juiste batterijen gebruikt
• Vermijd nieuwe met oude batterijen samen te gebruiken.
• Vermijd verschillende soorten batterijen samen te gebruiken.
• Verwijder batterijen als het apparaat een lange tijd niet gebruikt wordt.
• Bewaar batterijen nooit met metalen voorwerpen zoals ballpoint pennen, kettingen, haarspelde.
Verwijder de lege batterijen overeenkomstig de reglementen die in uw land in effect zijn.
Batterijen mogen niet vrijgesteld worden aan extreme hitte zoals zonneschijn of vuur.

VAROITUS! **FI**

Älä avaa kantta. Ei sisällä käyttäjä-huollettavia osia. Huollot saa suorittaa vain pätevä huoltomies.
Älä säilytä tuotetta minkään kuuman lähellä kuten patteri tai suorassa auringonpaisteessa, pölyisessä, mekaanisessa värinässä tai iskussa
Tuotetta ei saa altistaa tippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljakko eivät saa olla tuotteen lähettyvillä
Avotulia kuten sytytetty kynttilä ei saa olla tuotteen päällä.
Salli riittävä ilmankierto ja vältä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lämmön muodostuminen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytäliinoilla, verhoilla jne.
Verkkovirtapistoketta käytetään irrottamaan laite verkkovirrasta. Varmista, että pistorasia on helposti saatavilla ja irrota pistotulppa pistorasiasta, jos havaitset jotain epänormaalia laitteessa.
Jos laitetta käytetään väärin, akut voivat räjähtää tai vuotaa ja aiheuttaa vaurioita tai vammoja. Turvallisuuden vuoksi:
• Varmista, että paristot on vaihdettu oikein
• Älä käytä uusia paristoja yhdessä vanhojenkanssa
• Vältä erilaisten paristojen sekoittamista
• Poista paristot, jos laitetta ei käytetä pitkään aikaan
• Älä koskaan pidä akkuja yhdessä metallisten esineiden kanssa, kuten kuulakärkikynät, kaulakorut, hiusneulat jne.
Käytetyt paristot on hävitettävänoudattaen turvallisuus käsittelyn koskevia määräyksiä alueelasi.
Paristoja ei saa altistaa lämmölle kuten auringonpaiste tai tuli tai vastaava.

ATTENTION! **FR**

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation a du personnel de réparation qualifié
Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques
L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus
Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil
Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.
La prise secteur est utilisée comme dispositif de débranchement. La prise murale doit être facile d'accès, et en cas d'anomalie de l'appareil, débrancher la prise de courant au niveau de la prise murale.
Si elles ne sont pas manipulées correctement, les piles risquent de couler ou d'exploser, et occasionner des dégâts matériels ou des blessures. Par mesure de sécurité:
• Respecter la polarité lors du changement des piles
• Éviter d'utiliser des piles neuves et des piles usagées en même temps
• Éviter d'utiliser des types de piles différents en même temps
• Si l'appareil doit rester inutilisé pendant une longue période, retirer les piles
• Ne jamais mettre les piles en contact avec des objets métalliques tels que des stylos à bille, des colliers, épingles à cheveux, etc.
Les piles usagées doivent être éliminées conformément aux réglementations nationales spécifiques.
Les piles ne doivent pas être exposées à des sources de chaleur excessive telle que les rayons du soleil, le feu, etc.

WARNUNG! **DE**

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.
Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen.
Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.
Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.
Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.
Der Netzstecker dient zum Trennen des Gerätes vom Netz. Vergewissern Sie sich, dass die Steckdose leicht zugänglich ist, und ziehen Sie den Stecker aus der Steckdose, wenn Sie eine Anomalie mit dem Gerät bemerken.
Bei unsachgemäßer Verwendung können Batterien explodieren oder auslaufen und Schäden oder Verletzungen verursachen.
Im Interesse der Sicherheit:
• Achten Sie beim Austausch der Batterien auf die richtige Polarität.
• Vermeiden Sie es, neue Batterien zusammen mit gebrauchten Batterien zu verwenden.
• Vermeiden Sie es, verschiedene Batterietypen zu mischen.
• Entfernen Sie die Batterien, wenn das Gerät über einen längeren Zeitraum nicht benutzt wird.
• Bewahren Sie niemals Batterien zusammen mit metallischen Objekten wie Kugelschreibern, Halsketten, Haarnadeln usw. auf.
Gebrauchte Batterien müssen entsprechend den in Ihrer Region geltenden gesetzlichen Vorschriften entsorgt werden.
Batterien dürfen nicht extremer Hitze wie Sonnenschein, Feuer oder dergleichen ausgesetzt werden.

AVVERTIMENTO! **IT**

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto.
Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.
Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.
Non esporre il prodotto a fuoco, candele o oggetti simili.
Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc.
La spina principale viene utilizzata per disconnettere il prodotto dalla principale fonte di energia. Assicurarsi che la spina sia facilmente accessibile e disconnettere l'unità nel caso si notassero dei difetti di funzionamento.
Se utilizzate in modo improprio, le batterie possono esplodere o perdere liquido e causare danni o ingiurie. Per la vostra sicurezza:
• Fate in modo di rispettare la polarità quando le batterie vengono sostituite
• Evitare di combinare batterie vecchie e nuove
• Evitare di combinare differenti modelli di batterie
• Rimuovere le batterie se il prodotto rimane inutilizzato per lunghi periodi di tempo
• Non avvicinare mai le batterie a oggetti metallici quali penne a sfera, collane, spille, ecc.
E' necessario disporre delle batterie usate secondo le regole stabilite nel paese in cui vivete.
Le batterie non devono essere esposte a fonti di calore eccessive come fuoco, luce del sole, ecc.

ADVARSEL! **NO**

Ikke åpne dekselet. Inneholder ingen deler som kan brukes. Overlat reperasjon til kvalifisert servicepersonell.
Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt.
Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.
Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.
Tillat tilstrekkelig luftsirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, bordduker, gardiner osv.
Stikkontakten brukes til å koble apparatet fra strømforsyningen. Forsikre deg om at stikkontakten er lett tilgjengelig og ta støpselet ut av stikkontakten hvis du oppdager uregelmessigheter under bruk av apparatet.
Hvis feilaktig bruk kan batteriene eksplodere, lekke, og forårsake skade. For sikkerhets skyld:
• Pass på at du følger riktig polaritet når du bytter batterier
• Unngå å bruke nye batterier sammen med brukte
• Unngå å blande forskjellige typer batterier
• Fjern batteriene hvis apparatet skal forbli ubrukt over en lengre periode
• Ikke oppbevar batteriene sammen med metalliske gjenstander som for eksempel kulepenner, halskjeder, hårnåler osv.
Brukte batterier må kastes i samsvar med gjeldende regelverk for trygg kasting i regionen du bor i.
Batterier må ikke utsettes for høy varme som f.eks. solskinn, brann eller lignende.

OSTRZEŻENIE! **PL**

Nie otwierać pokrywy. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.
Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom.
Produkt ten nie może być eksponowany na kapanie lub chlapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczane.
Źródła otwartego ognia, takie jak np. świece, nie powinny być umiejscowiane na produkcie.
Należy zapewnić odpowiednią wentylację i unikać blokowania otworów wentylacyjnych, aby uniknąć wewnętrznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami.
Wtyczka sieciowa służy do odłączenia urządzenia od zasilania sieciowego. Należy upewnić się, że gniazdo sieciowe jest łatwo dostępne, a w razie wystąpienia nieprawidłości w funkcjonowaniu urządzenia odłączyć je od zasilania sieciowego.
Jeżeli produkt jest używany nieprawidłowo, baterie mogą eksplodować lub przeciekać. W celu zachowania bezpieczeństwa należy:
• Upewnić się, że wymieniane baterie mają odpowiednią polaryzację
• Unikać jednoczesnego używania nowych i używanych baterii
• Unikać mieszania różnych typów baterii
• Usunąć baterie, jeżeli urządzenie nie będzie używane przez długi okres czasu.
• Nigdy nie przechowywać baterii razem z metalowymi obiektami, takimi jak długopisy kulkowe, naszyjniki, spinki do włosów itd.
Zużytych baterii należy pozbyć się zgodnie z przepisami o bezpiecznym usuwaniu obowiązujących w zamieszkiwanym regionie.
Baterie nie mogą być wyeksponowane na nadmierne gorąco, jak np. słońce czy ogień.

ATENÇÃO! **PT**

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado
Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque
Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.
Não aproxime o produto a fontes de fogo vivo, como velas
Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloqueie a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais
O transformador é utilizado para conectar e desconectar o artigo da principal fonte de energia. Certifique-se que a ficha é facilmente acessível e que o artigo está devidamente ligado à corrente se detectar alguma anomalia com o funcionamento
O uso indevido das pilhas poderá levar a explosão ou fugas resultando em graves acidentes. Para sua segurança, por favor:
• Verifique se a polaridade das pilhas está correcta
• Evite utilizar pilhas novas e antigas ao mesmo tempo
• Evite utilizar diferentes tipos de pilhas ao mesmo tempo
• Retire as pilhas do equipamento na eventualidade de inactividade por longo periodo de tempo
• Nunca aproxime as pilhas de objectos metálicos como pinos de cabelo, colares, brincos ou canetas, etc.
Pilhas usadas deverão ser descartadas de acordo com os regulamentos de reciclagem aplicáveis no seu local de residência.
Não exponha as baterias a calor excessivo como luz solar directa ou fogo vivo.

VÝSTRAHA! **SK**

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.
Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so slnečným žiarením, nadmerným prašným prostredím, mechanickým vibráciám alebo šokom.
Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.
Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.
Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obštrukcii ventilačných otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrievania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod.
Hlavný kábel umožňuje odpojiť zariadenie od elektriny. Uistite sa, že hlavný napájací výstup je ľahko dostupný a odpojte kábel ak zaznamenáte akúkoľvek abnormalitu na zariadení.
Ak je zariadenie používané nesprávne, batérie môžu explodovať, alebo vytiecť a spôsobiť škodu alebo zranenie. V záujme bezpečnosti postupujte následovne:
• Uistite sa, že batérie sú v správnej polarite pri ich výmene
• Vyhýbajte sa používaniu nových batérií so starými
• Vyhýbajte sa používaniu rôznych typov batérií
• Batérie vyberte zo zariadenia v prípade ak nie je používaný po dlhšiu dobu
• Nikdy nedržte batérie v blízkosti železných objektov ako guľôčkové pero, náhrdelník, sponky a pod.
Použité batérie musia byť zlikvidované v súlade s reguláciami toho daného územia na ktorom žijete.
Batérie nesmú byť vystavené nadmernému teplu, ako napríklad slnečnému žiareniu, ohňu a podobne.

OPOZORILO! **SI**

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu osobju
Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranem prahu, mehanskim tresljajem ali udarcem
Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek
Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek
Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinah (če obstajajo), zaradi preprečevanja kopičenja notranje toplote. Ventilacijo se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn.
Omrežni vtič se uporablja za izklop naprave iz električnega omrežja. Poskrbite, da je omrežna vtičnica zlahka dostopna in izvlecite vtikač iz vtičnice, če opazite kakršno koli nepravilnost pri napravi.
V primeru nepravilne uporabe, baterije lahko eksplodirajo ali puščajo in povzročijo škodo ali poškodbe. V interesu varnosti:
• Poskrbite, da pazite na pravilno polarnost ob zamenjavi baterij
• Izogibajte se uporabi novih baterij skupaj z rabljenimi
• Izogibajte se mešanju različnih vrst baterij
• Odstranite baterije, če se naprava ne bo uporabljala za daljše časovno obdobje
• Nikoli ne hranite baterije skupaj s kovinskimi predmeti, kot so kemični svinčniki, verižice, lasnice, itn.
Rabljene baterije je potrebno odstraniti v skladu s katerimi koli predpisi za njihovo varno odlaganje, ki veljajo v regiji v kateri živite.
Baterije ne smejo biti izpostavljene prekomerni vročini, kot je sonce, ogenj ali podobno.

¡ADVERTENCIA! **ES**

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.
No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.
Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.
No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.
Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.
El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconéctelo de la toma de corriente.
El uso inadecuado de las pilas puede causar explosión o fugas y resultar en daños o lesiones. Para su seguridad, por favor:
• Compruebe la polaridad al reemplazar las pilas
• Evite utilizar pilas nuevas y antiguas al mismo tiempo
• Evite utilizar diferentes tipos de pilas al mismo tiempo
• Saque las pilas del aparato si no va a ser utilizado durante un largo periodo de tiempo.
• Nunca deje las pilas junto a objetos metálicos como bolígrafos, collares u horquillas.
Para deshacerse de las pilas usadas, debe seguir la normativa de su región o área.
No exponga las pilas a fuentes de calor excesivo como luz solar directa o llamas.

VARNING! **SE**

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal
Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.
Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.
Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.
Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.
Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du upptäcker något abnormalt med produkten.
Om produkten används felaktigt kan batterierna explodera eller börja läcka och orsaka skada. För att behålla säkerhet:
• Se till att batterierna sätts in i förhållande till rätt polaritet
•Undvik att använda nya batterier med gamla
• Undvik att blanda olika sorters batteri
• Avlägsna batterierna om produkten kommer att vara oanvänd under en längre tid
• Förvara aldrig batterier tillsamans med andra metallobjekt såsom pennor, halsband, hårålar, etc
Använda batterier bör kastas enligt lokala särkerhetsregulationer.
Batterier bör ej utsättas för hög värme såsom solljus, eld eller liknande.

INTRODUCTION

Thank you for purchasing the MK-5000 Portable Keyboard by Gear4music.
To help you get the most out of your new equipment, please read this manual carefully.

MAIN FEATURES

61 Note MIDI Keyboard
345 Voices and 128 Rhythms
Follow & Ensemble Options
40 Demo Songs & Built-In Sequencer

CONTROL FUNCTIONS

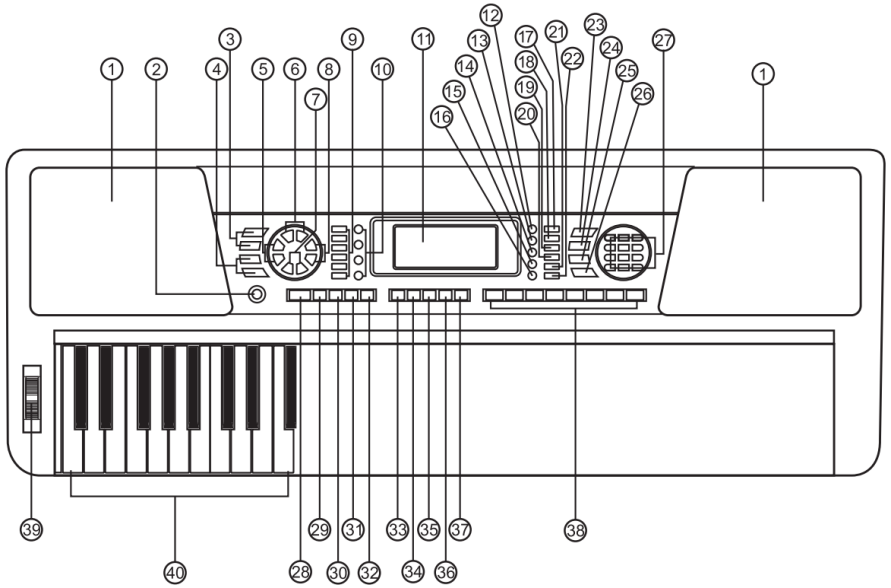

1 – SPEAKERS
2 – POWER SWITCH
3 – MASTER VOLUME
4 – RHYTHM VOLUME
5 – VIBRATO
6 – TEMPO
7 – CHORD VOL
8 – TRANSPOSE
9 – CHORD MAT
10 – MEMORY
11 – LCD SCREEN
12 – DEMO SONG
13 – ONE KEY
14 – GUIDE
15 – REC
16 – PLAY
17 – TOUCH
18 – DUAL
19 – SUSTAIN
20 – KEYBOARD PERCUSSION
21 – SPLIT
22 – MIDI
23 – TIMBRE 1
24 – TIMBRE 2
25 – RHYTHM
26 – RHYTHM SHIFT
27 – NUMERIC PAD
28 – START/STOP
29 – SYNC
30 – FILL-IN
31 – INTRO/ENDING
32 – METRONOME
33 – CHORD TIMBRE
34 – SINGLE
35 - FINGERED
36 - PROG
37 – NULL-PLAY
38 – PANEL PERCUSSION BUTTONS
39 – PITCH BEND WHEEL
40 – CHORD SECTION

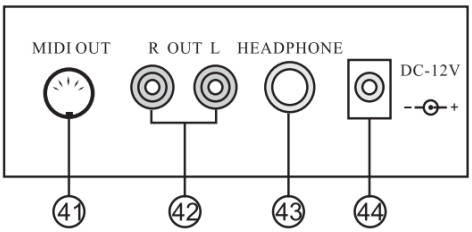

41 – MIDI OUT

42 – OUT L / R RCA

43 – HEADPHONE OUT

44 – DV 12V POWER INPUT

INSTALLATION OF BATTERIES – Install eight 'D' size batteries (not included) into the battery compartment. Please pay attention to the correct polarity. When the batteries are low on power the instrument will not perform properly, please change the batteries as soon as they get low. If the instrument will not be used for a long period, make sure to remove the batteries.

USING POWER SUPPLY ADAPTER – The DC power supply must be the one designated for use with the instrument. Connect the power supply to the mains power then connect to the designated power adapter jack to the instrument (44).

CONNECTING TO AMPLIFIER – You will need an RCA cable (not included) to connect the MK-5000 to an external stereo amplifier via the OUT L/R sockets (42).

USING HEADPHONES – Connect stereo headphones (not included) into the headphone jack (43) to listen to the keyboard in private. The built-in speakers are disabled while headphones are connected.

MIDI OUTPUT – Midi (musical instrument digital interface) is a standardised specification for music synthesisers that respond to MIDI messages. You can connect the instrument to the computer via the MIDI OUT jack (41) and upload your performance to the computer for further recording, composing or editing. You will need a standard MIDI-USB cable (not included) to connect the MIDI OUT jack on the keyboard to a USB port on the computer, and you will need 3rd-party MIDI software (not included) installed on the computer.

SWITCHING ON - Push the POWER button (2) to turn the instrument on. The LCD display (11) will light. Press the POWER button again to switch the instrument off.

LCD DISPLAY

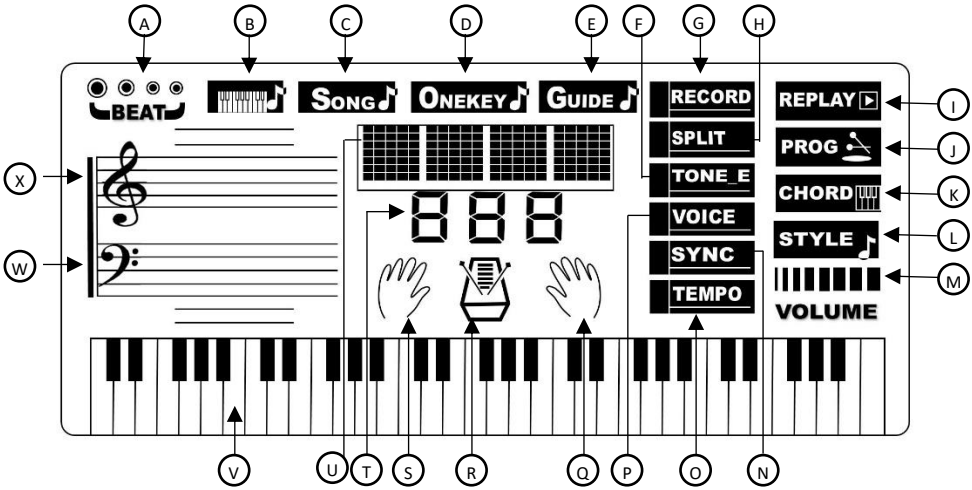

A. Beat indicator
B. Not used
C. SONG indicator. Lights when a built-in song is playing.
D. ONE KEY indicator. Lights during one-key lesson mode.
E. GUIDE indicator. Lights during guided lesson mode.
F. SUSTAIN indicator. Lights while the sustain function is enabled.
G. RECORD indicator. Lights when melody recording mode is active.
H. SPLIT indicator. Lights while keyboard is split into two timbres.
I. REPLAY indicator. Lights while recorded melody or programmed rhythm is being played back.
J. PROG indicator. Lights when rhythm programming is active.
K. CHORD indicator. Lights while single or fingered chord modes are selected.
L. STYLE indicator. Lights while numeric keypad is allocated to rhythm selection.
M. Volume bar. Gives a visual indication of the master volume.
N. SYNC indicator. Lights while synchronised start of rhythm and accompaniment is selected.
O. TEMPO indicator. Lights while the current temp is displayed on the numeric display.
P. VOICE indicator. Lights while numeric keypad is allocated to timbre selection
Q. Right-hand fingering guide.
R. Metronome.
S. Left-hand fingering guide.
T. Numeric display.
U. Text display.
V. Keyboard. Keys illuminate to show which note(s) are being played.
W. Bass clef. Bass notes appear on this staff as they are played.
X. Treble clef. Treble notes appear on this staff as they are played.

VOLUME ADJUSTMENT – Press the MASTER VOLUME + / - buttons (3) to increase or decrease the master volume. The volume Bar (M) shows the volume level. Pressing both buttons together simultaneously will return the unit to the default volume

DEMONSTRATION SONGS – There are 40 pieces of demo music stored in the keyboard. Press the DEMO SONG button (12) to play each demo song in sequence. The SONG indicator (C) will light. The name of the song will scroll across the text display (U) and the song number will be shown in the numeric display (T). Press the START/STOP button (28) or press the DEMO button again to stop playback.

While demo mode is active, you can use the + and - buttons on the numeric keypad (27) to move to the next or previous song. You can also enter a 3-digit song number from 000 to 039 to directly access your chosen song.

SELECTION OF TIMBRE – When you switch on the instrument, the starting timbre is acoustic grand piano. The text display (U) shows 'AcoP' and the numeric display (T) shows '000'. You can choose between any of the 344 included timbres freely. If the Voice indicator (P) is not already lit, press the Timbre 1 button (23). Enter the number corresponding to the desired timbre by using the numeric pad (27), for example, pressing '0', then '2' then '0' will select timbre 020 (Reed organ). The numeric display shows '020' and the text display shows 'Reed'. Using the + & - buttons will also cycle through the available timbres. A summary the of timbres is printed on the top of the keyboard and a full list appears at the end of this manual.

SUSTAIN FUNCTION – Press the SUSTAIN button (19) to switch on the sustain function. The SUSTAIN indicator (F) on the display will illuminate. Pressing the SUSTAIN button again will disable the effect and the SUSTAIN indicator will go off.

VIBRATO – The default amount of vibrato is set to 000, you can increase the amount of vibrato on each note using the VIBRATO buttons (5). The range is from 000 to 007. As you adjust the vibrato, the text display (U) will show 'Vibrat' and the numeric display (T) will show the current value. Pressing both buttons together will reset the vibrato back to 000.

TOUCH RESPONSE – By default, touch response is enabled so that louder notes are played when the keys are pressed harder, and vice versa. Press the TOUCH button (17) to disable this feature. The text display (U) will show 'TouchOff'. Press the TOUCH button again to re-enable touch response. The text display will show 'TouchOn'.

PITCH BEND – Moving the PITCH BEND WHEEL (39) upwards or downwards increases or decreases the pitch slightly, when you let go of the wheel the pitch will return back to normal.

TRANSPOSE – This function allows you to shift the overall key of the keyboard in steps of one semitone. The range is +/- 6 semitones. Press the TRANSPOSE buttons (8) to raise or lower the key. The text display will show 'Trans' and the numeric display will show values in the range '-06' to '006'. Press both buttons together to return to normal.

DOUBLE TIMBRE – This feature allows you to layer two timbres to create a fuller sound. When you press the DUAL button (18), the text display (U) shows 'DoubleOn'. The default combination is 000 and 048, which are acoustic grand piano and string ensemble sounds combined. To create your own mix, first press the TIMBRE 1 button (23). The text display (U) shows the name of the timbre and the numeric display (T) shows the timbre number. Use the numeric keys (27) to select the first timbre. Press the TIMBRE 2 button (24) and repeat the process for the second timbre. Press the DUAL button again to disable the feature.

SPLIT FUNCTION – This feature allows you to use the keyboard as two separate instruments at the same time, with the left-hand 24 keys playing one timbre, and the remaining keys playing another. Before pressing the SPLIT button (21), select a timbre in the usual way, using the TIMBRE 1 button (23) and the numeric pad (27). This timbre will be used for the left-hand side of the keyboard. Next, press the SPLIT button to activate the function. The SPLIT indicator (H) will illuminate. The keyboard is then divided into two parts. Now, select another timbre using the TIMBRE 1 button and the numeric pad again. This timbre will be used for the right-hand side of the keyboard. The pitch of the left-hand side of the keyboard is raised so that the first note changes from C2 to C4, to match the pitch of the right-hand side of the keyboard.
Press the SPLIT button again to disable the split keyboard mode. Note: The SPLIT function cannot be used in conjunction with SINGLE or FINGERED chord modes. Selecting one of these modes will automatically disable the SPLIT function.

SINGLE KEY AUTO-BASS CHORD – Press the SINGLE button (34) to select single key chord mode. The CHORD indicator (K) will light. Press one of the bottom 19 keys on the keyboard to play the corresponding major chord. The major chords are marked above the keys. Minor chords can be played by pressing the major key and any black key to its left. Seventh chords can be played by pressing the major key and any white key to its left. Minor seventh chords can be played by pressing the major key plus any white key and any black key to its left. Example fingering is shown in the diagram below:
Press the SINGLE button again to return the keyboard to normal operation. The CHORD indicator will go off.

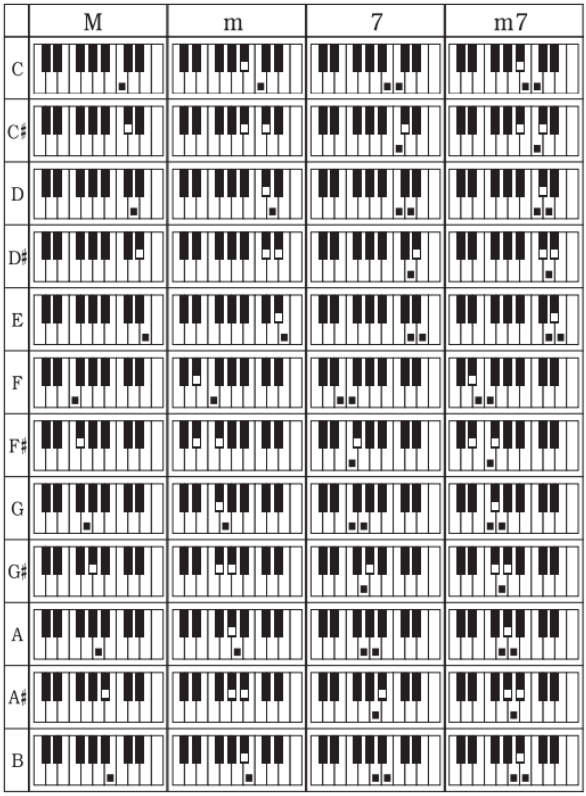

FINGERED AUTO BASS CHORD – Press the FINGERED button (25) to select the fingered chord mode. The CHORD indicator (K) will light. Press the required combination of the bottom 19 keys to play the chord.

The fingering for C-root chords is shown below:

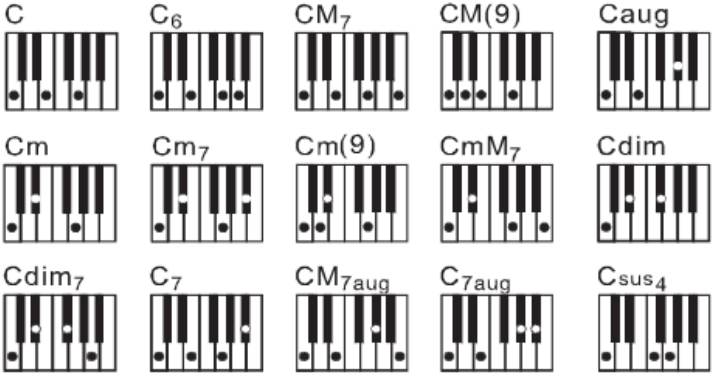

Press the FINGERED button again to return the keyboard to normal operation. The CHORD indicator will go off.

Note: The SINGLE or FINGERED chord modes cannot be used in conjunction with the SPLIT function. Selecting the SPLIT function will automatically disable these modes.

CHORD TIMBRES – The instrument features 5 chord timbres, press the CHORD TIMBRE button (33) successively to cycle through the available timbres. The numeric display shows the timbre number from '000' to '004' and the text display shows 'ChordTone'.

CHORD MAT – You can add decoration to your performance by pressing any of the 6 CHORD MAT buttons (9) to punch in special phrases or rhythms. Combinations of CHORD MAT buttons can be pressed if desired.

RHYTHM – The method for selecting a rhythm is the same as selecting a Timbre: If the STYLE indicator (L) is not already lit, press the RHYTHM button (25). Enter the number corresponding to the desired rhythm by using the numeric pad (27), for example, pressing '0', then '2' then '0' will select rhythm 020 (Country 1). The numeric display shows '020' and the text display shows 'Coun'. Using the + & - buttons will also cycle through the available rhythms. A full list the of rhythms is printed on the top of the keyboard.
Press the START/STOP button (28) to start or stop the rhythm.

ADJUSTING THE RHYTHM VOLUME – Press the RHYTHM VOL + or RHYTHM VOL – buttons (4) to increase or decrease the rhythm volume. The numeric display shows the rhythm volume from '000' to '007' and the text display shows 'RhyVol'. Pressing both buttons together will reset to default setting.

AUTO ACCOMPANIMENT – Start playing any rhythm then play a chord using either the single or fingered chord modes to begin auto-accompaniment.

ADJUSTING THE CHORD VOLUME – Press the CHORD VOL buttons (7) to increase or decrease the chord volume within the auto-accompaniment. The numeric display shows the chord volume from '000' to '007' and the text display shows 'ChordVol'. Pressing both buttons together will reset to default setting.

RHYTHM & ACCOMPANIMENT SYNCHRO START – You can set up the keyboard to begin playing the rhythm at the same time as the accompaniment. First, ensure that single or fingered chord mode is selected. Next, select one of the rhythms and then press the SYNC button (29) to prepare for synchro start. The SYNC indicator (N) will light. Finally, press the key(s) for the required chord to begin playing the rhythm and accompaniment. The SYNC indicator will go off. Press the START/STOP button (28) to stop playing the rhythm and accompaniment.

FILL-IN – Fill-in patterns let you momentarily change the rhythm pattern to add variety to the performance. Press the FILL-IN button (30) at any time during rhythm or auto-accompaniment playback to insert a fill-in.

RHYTHM SHIFT - pressing the RHYTHM SHIFT button (26) will add variations to the performance by playing an alternate version of the rhythm. Press the RHYTHM SHIFT button again to return to the main rhythm.

INTRO/ENDING – This button lets you insert an intro at the start of a rhythm pattern, or add an ending pattern at the end of your performance. If you press the INTRO/ENDING button (31) while there is no rhythm playing, you will hear a short intro sequence and then the rhythm will start. If you press the INTRO/ENDING button while a rhythm is playing, the keyboard will play an ending pattern before stopping the rhythm.
You can combine the Intro feature and the Synchro Start feature by following the steps described earlier for synchro start, but simply press the INTRO/ENDING button before pressing the required key(s) on the keyboard.

PERCUSSION KEYS – There are 8 dedicated percussion keys (38) and 61 keyboard percussion sounds on the MK-5000. To play a sound from the percussion keys, simply press the buttons. To access the 61 keyboard percussion sounds, press the KEYBOARD PERCUSSION button (20). The text display (U) will briefly show 'Perc'. The keyboard keys now produce percussions sounds as indicated by the symbols printed above the keys. Press the KEYBOARD PERCUSSION button to revert to normal keyboard operation. The text display briefly shows 'OFF'.

ADJUSTING TEMPO – The default speed of the metronome is 120bpm. Press the TEMPO + / - buttons (6) to increase or decrease the speed. The current tempo will be shown in the numeric display (T). Hold down one of the buttons to rapidly change the tempo. Pressing both buttons together will return the keyboard to the default tempo of 120bpm. The range of tempos goes from 30 – 240bpm.

METRONOME – The metronome feature produces a high click for the first beat of each measure, and a low click for the remaining beats. You can set the number of beats per measure from 1 to 4. The first time you press the METRONOME button (32) the keyboard begins playing the metronome sound with 1 beat per measure, the metronome symbol (R) animates, the numeric display shows '001', and the text display shows 'beat'. Press the METRONOME button again to stop the metronome. The metronome symbol animation stops. The next time you press the METRONOME button the keyboard begins playing the metronome sound with 2 beats per measure and the numeric display shows '002'. This sequence continues each time you press the METRONOME button up to 4 beats per measure, then returns to 1 beat per measure. You can use the TEMPO + / - buttons (6) to increase or decrease the speed of the metronome.

REGISTRATION MEMORY – This function allows you to store up to three sets of timbre, rhythm and tempo information for quick recall via a single button. First, choose the timbre, rhythm & tempo you require, as previously described. Then press the MEMORY button (10) and one of the three preset buttons simultaneously.
You can recall the settings simply by pressing the preset button of your choice.
Note: The memory is not retained when power to the keyboard is switched off.

RHYTHM PROGRAMMING – Press the PROG button (36). The PROG indicator (J) will light and the keyboard is automatically set to percussion mode. Press any sequence of percussion buttons (38) and keyboard percussion sounds to record a rhythm pattern, up to a maximum of 32 beats. Recording stops automatically if you record all 32 beats, and the text display (U) shows 'FULL'. When you have finished programming your rhythm, press the NULL PLAY button (37) to play back your rhythm in a loop. The REPLAY indicator (I) will light. Press the TEMPO buttons (6) to cause the rhythm to speed up or slow down. Press the NULL PLAY button again to stop playback. Press the PROG button again, or press the START/STOP button (28) to clear the programmed rhythm from memory. The PROG indicator will go off.
NOTE: If you have previously recorded a song using the record function (see below), you will no longer be able to play it back once you have programmed a rhythm.

SONG RECORDING AND PLAYBACK – Press the REC button (15) and the RECORD indicator (G) will show in the display. Play the tune that you want to record, up to a maximum of 470 individual notes. Recording stops automatically if you fill the memory, and the text display (U) shows 'FULL'.
When you have finished recording your song, press the PLAY button (16) to play back your song. The REPLAY indicator (I) will light. Press the TEMPO buttons (6) to cause the song to speed up or slow down.
When playback is finished the REPLAY indicator will go off. Press the PLAY button again if you want to hear your song again.
Press the REC button again, or press the START/STOP button (28) to clear the programmed song from memory. The RECORD indicator will go off.
NOTE: If you have previously recorded a rhythm using the program function (see above), you will no longer be able to play it back once you have recorded a song.

ONE-KEY PLAY – This feature is designed to help you learn the timing of the notes for the built-in songs. When you press the ONE KEY button (13), the SONG indicator (C) and ONEKEY indicator (D) will light; the text display (U) shows the name of the current song, and the numeric display (T) shows the song number. The keyboard plays the introduction and waits for you to press any key on the keyboard.
At this point, you can choose a different song by using the + and - buttons on the numeric keypad (27) to move to the next or previous song. You can also enter a 3-digit song number from 000 to 039 to directly access your chosen song.
The display keyboard (V) will indicate the correct key to play, and the fingering guides (Q, S) will show the correct finger(s) to play the note. However, in one-key mode, you can press any key on the keyboard to play the first note. The keyboard continues to play the accompaniment and pauses for you to play each note. When you press a note, the accompaniment continues. Continue pressing any key for each note until the song is complete. After a short pause, the song will begin again. To end one-key play, press the ONE KEY button again.

GUIDE – This feature plays the accompaniment for the built-in songs automatically, and allows you to play the melody. When you press the GUIDE button (14), the SONG indicator (C) and GUIDE indicator (F) will light; the text display (U) shows the name of the current song, and the numeric display (T) shows the song number.
At this point, you can choose a different song by using the + and - buttons on the numeric keypad (27) to move to the next or previous song. You can also enter a 3-digit song number from 000 to 039 to directly access your chosen song.
The keyboard begins to play the melody and accompaniment automatically. The display keyboard (V) will indicate the correct key to play, and the fingering guides (Q, S) will show the correct finger(s) to play the note. If you press a key, the keyboard will stop playing the melody so that you can play it yourself, but will continue the accompaniment. If there is no keystroke in 3 seconds, the system will continue playing the melody itself, until a key is pressed again.
Press the TEMPO +/- buttons (5) to cause the song to speed up or slow down.
At the end of the song there will be a short pause, then the song will begin again. To end guided play, press the GUIDE button again.

SPECIFICATION

Speakers – 2 x 4" Speaker Cones
Dimensions – 950mm x 360mm x 160mm
Weight – 4.7kg
Power – 8 x D Batteries (not included) or 12Vdc via 100-240vac adapter (Included)
Inputs – None
Outputs – MIDI out DIN, Left & Right RCA, Headphones ¼" jack

TIMBRES

000 Acoustic Grand Piano
001 Bright Acoustic Piano
002 Electric Grand Piano
003 Honky-tonk Piano
004 Rhodes Piano
005 Chorused Piano
006 Harpsichord
007 Clavichord
008 Celesta
009 Glockenspiel
010 Music box
011 Vibraphone
012 Marimba
013 Xylophone
014 Tubular Bells
015 Dulcimer
016 Hammond Organ
017 Percussive Organ
018 Rock Organ
019 Church Organ
020 Reed Organ
021 Accordian
022 Harmonica
023 Tango Accordian
024 Acoustic Guitar (nylon)
025 Acoustic Guitar (steel)
026 Electric Guitar (jazz)
027 Electric Guitar (clean)
028 Electric Guitar (muted)
029 Overdriven Guitar
030 Distortion Guitar
031 Guitar Harmonics
032 Acoustic Bass
033 Electric Bass(finger)
034 Electric Bass (pick)
035 Fretless Bass
036 Slap Bass 1
037 Slap Bass 2
038 Synth Bass 1
039 Synth Bass 2
040 Violin
041 Viola
042 Cello
043 Contrabass
044 Tremolo Strings
045 Pizzicato Strings
046 Orchestral Harp
047 Timpani
048 String Ensemble 1
049 String Ensemble 2
050 Synth Strings 1
051 Synth Strings 2
052 Choir Aahs
053 Voice Oohs
054 Synth Voice
055 Orchestra Hit
056 Trumpet
057 Trombone
058 Tuba
059 Muted Trumpet
060 French Horn
061 Brass Section
062 Synth Brass 1
063 Synth Brass 2
064 Soprano Sax
065 Alto Sax
066 Tenor Sax
067 Baritone Sax
068 Oboe
069 English Horn
070 Bassoon
071 Clarinet
072 Piccolo
073 Flute
074 Recorder
075 Pan Flute
076 Bottle Blow
077 Shakuhachi
078 Whistle
079 Ocarina
080 Lead 1 (square)
081 Lead 2 (sawtooth)
082 Lead 3 (caliope lead)
083 Lead 4 (chiff lead)
084 Lead 5 (charang)
085 Lead 6 (voice)
086 Lead 7 (fifths)
087 Lead 8 (bass+lead)
088 Pad 1 (new age)
089 Pad 2 (warm)
090 Pad 3 (polysynth)
091 Pad 4 (choir)
092 Pad 5 (bowed)
093 Pad 6 (metallic)
094 Pad 7 (halo)
095 Pad 8 (sweep)
096 FX 1 (rain)
097 FX 2 (soundtrack)
098 FX 3 (crystal)
099 FX 4 (atmosphere)
100 FX 5 (brightness)
101 FX 6 (goblins)
102 FX 7 (echoes)
103 FX 8 (sci-fi)
104 Sita
105 Banjor
106 Shamisen
107 Koto
108 Kalimba
109 Bagpipe
110 Fiddle
111 Shanai
112 Tinkle Bell
113 Agogo
114 Steel Drums
115 Woodblock
116 Taiko Drum
117 Melodic Tom
118 Synth Drum
119 Reverse Cymbal
120 Guitar Fret Noise
121 Breath Noise
122 Seashore
123 Bird Tweet
124 Telephone Ring
125 Helicopter
126 Applause
127 Gunshot
128 Suona
129 Pipa
130 Sanxian
131 Bandi
132 Erhu
133 Guzheng
134 DaSuoNa
135 Gaohu
136 Rock Grand Piano
137 Electronic organ
138 Psychedelic electronic
139 Water jean
140 Bright Guitar
141 Orchestra piccolo
142 Heavy metal guitar
143 Crystal guitar
144 Queer electric Piano
145 Bright bass
146 Rock Electric Bass
147 Psychedelic Bass
148 Rhythm Electric Bass
149 Heavy metal bass
150 Magic electronic
151 Bright violin
152 Atonic violin
153 Heavy bass orchestra
154 Synth clarinet
155 Interactive Lead
156 orchestral keyboard
157 Bagpipes
158 Synth Banjo
159 Japan Synth
160 Church Piano
161 Church electric Piano
162 Synth Piano
163 Baritone Piano
164 Piano PAD
165 String Piano
166 Metal Piano
167 Light rhythm Piano
168 electric Piano Pad
169 Classical piano
170 Organ Guitar
171 Electric Guitar
172 Synthesis Nylon Guitar
173 Synth Electronic Guitar
174 Bright Clean Guitar
175 Orchestra Guitar
176 Psychedelic Guitar
177 Bright organ
178 Pick organ
179 Synth accordion
180 Bright Violin
181 Stringed violin
182 Trill violin
183 Electronic violin
184 Large violin
185 rhythm Orchestra
186 Pizzicato Violin
187 Pizzicato Ensemble 1
188 Pizzicato Ensemble 2
189 Percussion band
190 BaritoneSynthContrabass
191 Bass Flute
192 Distortion Contrabass
193 Contrabass Lead
194 Violin Lead
195 Cello Lead
196 Pizzicato rhythm
197 high Harp
198 Harp ensemble
199 Synth Harp
200 Baritone Trumpet
201 Trumpet ensemble
202 rhythm Trumpet
203 high Trumpet
204 Synth Trumpet
205 Bass Trombone
206 Trombone ensemble
207 rhythm Trombone
208 high Trombone
209 baritone Trombone
210 Synth Trombone
211 Violin French Horn
212 French Horn ensemble
213 Electronic French Horn
214 Synth French Horn
215 PsychedelicSynth Brass
216 Distortion Synth Brass
217 Vibraphone Synth Brass
218 Rock Synth Brass
219 Synth Muted Trumpet
220 Soprano Sax ensemble
221 Hit Soprano Sax
222 Synth Soprano Sax
223 National Sax
224 Metal Sax
225 Baritone Sax ensemble
226 Crystal Sax
227 Soft Baritone Sax
228 Synth Baritone Sax
229 Heavy metal Sax
230 Church Oboe
231 Oboe ensemble
232 Bass Oboe
233 Bright Oboe
234 distortio oboe
235 English Horn ensemble
236 Pizzicato English Horn
237 Diplophonia English Horn
238 Bright English Horn
239 Synth English Horn
240 Psychedelic Synth Lead
241 Vibraphone Synth Lead
242 Marimba Synth Lead
243 Metal FX
244 Electronic FX
245 Electronic String Ensemble
246 Wind FX
247 Clarinet FX
248 Organ FX
249 Crystal FX
250 Synth Shamisen
251 Electronic Shamisen
252 Bright Sitar
253 Whistle Accord
254 rhythm Nation
255 Bright Koto
256 Koto Lead
257 Diplophonia Koto
258 Baritone Koto
259 Synth Koto
260 Environmental Lead
261 Metal Lead
262 Orchestra Lead
263 Glockenspiel Lead
264 Bass Lead
265 Fifths Lead
266 Wind Lead
267 Atmosphere Lead
268 Sharp Lead
269 Bright Lead
270 East Nation Pad
271 Atmosphere Pad
272 Electric bass Pad
273 electric Piano Pad
274 Clean Guitar Pad
275 Western Pad
276 Sci-fi Pad
277 Metal Sci-fi Pad
278 Clarinet Pad
279 Electronic dance Pad
280 Double Kalimba
281 Bright Kalimba
282 Crystal Kalimba
283 Synth Kalimba
284 Electronic Bagpipe
285 Wind Bagpipe
286 high Bagpipe
287 Bright Bagpipe
288 Orchestra Bagpipe
289 Baritone Bagpipe
290 Environmental Shanai
291 Baritone Shanai
292 Tenor Shanai
293 high Shanai
294 Synth Shanai
295 Bright Steel Drums
296 Steel Drums Lead
297 Lyric Steel Drums
298 Orchestra Steel Drums
299 Synth Steel Drums
300 Rhythm electric Piano
301 Baritone Xylophone
302 Clean Piano
303 Bright Dulcimer
304 Rhythm Grand Piano
305 Rhythm Accordian
306 Marimba Harp
307 Synth Xylophone
308 Psychedelic Jazz Guitar
309 Rhythm Electric Guitar
310 Baritone Piccolo
311 Pan Flute Pad
312 Soft Pad
313 Fierce Organ
314 Fantasy Clarinet
315 Bright Rhythm
316 Synth Brass Ensemble
317 Electronic Xylophone
318 Atmosphere Pizzicato
319 Rhythm Clarinet
320 Bright Dulcimer
321 Double British pipe
322 Bright Bassoon
323 Electronic Synth Bassoon
324 Rock Wind
325 Synthetic effect wind1
326 Synthetic effect wind2
327 Synthetic effect wind3
328 Synthetic effect wind4
329 Synthetic Fiddle
330 Special Echo FX
331 Electronic Organ Lead
332 Church Organ Lead
333 Science Fiction Classic
334 Electronic Bagpipe
335 String Ensemble Pad
336 Electronic wind Pad
337 Organ Electric Guitar
338 Jazz Electric Piano
339 Rock Timpani
340 Fantasy Atmosphere
341 Heavy metals Pad
342 Bright clavichord
343 Noise Lead
344 Classical Electronic

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on +44 (0)330 365 4444 or info@gear4music.com